


Fluorescence

### INSTRUCTION MANUAL

S/8 candle  
388029

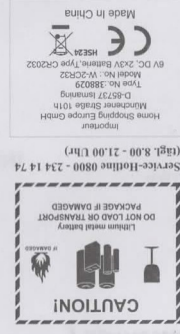

Service-Hotline 0800 - 234 14 74  
(call: 8.00 - 21.00 Uhr)

Importeur  
Home Shopping Europe GmbH  
München, Straße 101h  
D-85737 Bamberg  
Type No.: 388029  
Model No.: W-CR232  
AV DC, 2x3V Batterie, Type CR2032  
HSE24  
Made in China

Imported by  
Home Shopping Europe GmbH  
München, Straße 101h D-85737 Bamberg  
Free service number 0800 - 234 14 74 (08.00 to 21.00 o'clock day-to-day)  
www.hs24.de

## HSE24

## HSE24

Fluorescence

### BEDIENUNGSANLEITUNG

S/8 Kerze  
388029



Service-Hotline 0800 - 234 14 74  
(call: 8.00 - 21.00 Uhr)

Importeur  
Home Shopping Europe GmbH  
München, Straße 101h  
D-85737 Bamberg  
Type No.: 388029  
Model No.: W-CR232  
AV DC, 2x3V Batterie, Type CR2032  
HSE24  
Made in China

Importiert durch  
Home Shopping Europe GmbH  
München, Straße 101 h D-85737 Bamberg  
Service-Hotline 0800 - 234 14 74 (08.00 - 21.00 Uhr)  
www.hs24.de

## HSE24

### Cleaning and Maintenance

Use a soft dry cloth for cleaning. By time and temperature, the product color may exit fade or come off wax oil. It is wax feature, does not affect the normal use.

### Safety information


- Not suitable for children!
- Use for the intended purpose only.
- Only use inside, only use in dry environment.
- Avoid direct eye contact with the LED.
- Do not use if the product is damaged.
- The installed LEDs are not interchangeable.

### Specifications

- 3V DC and 6V DC per candle (2 type AA Batteries and 2 type CR2032 Batteries)

### Battery Disposal

According to Battery Directive (2006/66/EC), batteries must not be disposed with household waste, as they may contain substances harmful for the environment and health. Exhausted batteries can be deposited at public collection points of the community or recycling centers in your area. To prevent heating by short circuits, lithium batteries must be unloaded before, the poles suggest to be protected by using an insulating tape or other measures to be protected against short circuit.



### Scope of delivery

- Candle: 8 pieces
- Batteries: 8 x 1.5V AA, 8 x 3V CR2032

### Installation instructions

1. Remove the packaging.
2. Insert the batteries, as shown in the figure



### Operation

Please remove the batteries, if not used for extended periods of time.

1. Open the battery compartment on the bottom of the candle.
2. Insert the 2AA and 2 CR2032 batteries in the battery compartment with the correct direction and polarity, and close the compartment
3. To turn on the LED-light, turn the button on the bottom of the candle to 4H / 8H.
4. Set the candle at the desired place.
5. To turn off the lights, switch the 4H / OFF / 8H-button to "OFF".
6. Switch the I / II button to "I", the light is steady.
7. Switch the I / II button to "II", the light is flickering.

### Timer Function

1. After 4 or 8 hours run time, the LED turns off automatically.
2. The next day, the LED at the same time on again.
3. This process is repeated endlessly. Stop the timer by pressing the OFF switch.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

### Sicherheitshinweise

- Nicht für Kinder geeignet
- Nur für bestimmungsgemäßen Gebrauch.
- Nicht für Außenbereich, nur in trockenen Räumen benutzen.
- Bei offenkundiger Beschädigung nicht mehr benutzen.
- Vermeiden Sie den direkten Blick in die LED.
- Die installierten LEDs sind nicht austauschbar.

### Technische Daten

- 3V DC and 6V DC je Kerze (2 Batterien 1,5V AA und 2 Batterien 3V CR2032)


### Sicherheitshinweise für Batterien

- auf richtige Polarität (+ / -) achten
- nicht wiederaufladen
- nicht kurzschließen
- nicht mit Feuer, Wasser oder hohen Temperaturen in Kontakt bringen
- Batterien können explodieren, austreten und Schaden verursachen.
- von Kindern fernhalten. Bei verschluckter Batterie, sofort einen Arzt konsultieren.
- Nicht unterschiedliche Batterietypen mischen, immer kompletten Batteriesatz wechseln



### Entsorgen der Batterien

Das Symbol mit der durchgestrichenen Mülltonne bedeutet, das Batterien nicht in den Hausmüll gehören, da sie möglicherweise für Umwelt und Gesundheit schädliche Stoffe enthalten. Sie können in Ihre Nähe abgeben. Zur Verhinderung von Anamnestosen oder Westmühen in Ihrer Nähe abgeben oder Batterien an öffentlichen Abnahmestellen oder Westmühenmassen für Kurztrennung entsorgen und durch Abkühlung der Pole oder andere Maßnahmen vor Kurzschluss geschützt werden.




Das Symbol der Abkühlung auf Radern weist auf die Notwendigkeit der gemeinsamen Sammlung hin. Heften auch Sie mit beim Umweltschutz und sorgen dafür, dieses Gerät, wenn Sie es nicht mehr nutzen wollen, in die hierfür vorgesehenen Systeme der Gebätemanagementung zu geben. In Deutschland sind Sie gesetzlich verpflichtet, ein Abgerät bevor vorn unsortierten Siedlungsabfall getrennten Erfassung zuzuführen.

### Lieferumfang

- Kerze: 8 Stück
- Batterien: 8 x 1.5V AA, 8 x 3V CR2032

### Montageanleitung

1. Entfernen Sie die Verpackung.
2. Legen Sie die Batterien, wie auf der Abbildung gezeigt.



### Inbetriebnahme

Bei längerer Nichtbenutzung, Batterien bitte entnehmen.

### Timer-Funktion

1. Öffnen Sie das Batteriefach auf der Unterseite der Kerze.
2. Legen Sie 2AA und 2 CR2032 Batterien in entsprechender Richtung und Polung in das Batteriefach und schließen es wieder.
3. Um das LED-Licht einzuschalten schalten Sie den Knopf auf der Unterseite der Kerze auf "4H / 8H".
4. Stellen Sie die Kerze an den gewünschten Ort.
5. Um das Licht auszuschalten, schalten Sie den 4H / OFF / 8H-Knopf auf "OFF".
6. Schalten Sie den I / II button auf "I", ist das Licht stabil.
7. Schalten Sie den I / II button auf "II", flackert das Licht.

### Säuberung und Instandhaltung

1. Nach 4 oder 8 Stunden Laufzeit, schaltet LED automatisch aus.
2. Am nächsten Tag schaltet sich das LED zur selben Zeit wieder ein.
3. Dieser Vorgang wiederholt sich endlos. Stoppen Sie die Timerfunktion durch Betätigung des OFF-Schalters.

Benutzen Sie ein weiches und trockenes Tuch zur Säuberung. Wechslerzen können in Abhängigkeit von Zeit und Temperatur die Farbe ändern und abbläuen. Dies stellt keine Beeinträchtigung dar.